

INSTRUCTION

WC-EXT


● How to update the firmware of WC-EXT:

(1) Firmware Update Method A (For controllers running firmware version V0.00.05 or earlier)


1. Download the firmware package from the website.
2. Put the two firmware files into the root directory of the USB drive (make sure all firmware files are of the same version).
3. Insert the USB drive into the USB port of the wired controller.
4. Press and hold the MENU button, and plug in the connection cable (please ensure the other end is connected to the light fixture). Turn on the light fixture's power switch, and the wired controller will enter the firmware update interface.
5. Select update to proceed with the upgrade process.
6. Once the firmware update is complete, manually restart the controller by disconnecting and reconnecting the light fixture.

(2) Firmware Update Method B (For controllers running firmware version V1.01.01 or later)

1. Download the firmware installation package from the website.
2. Put the two firmware files of the fixture in the root directory of the USB drive (make sure all firmware files are of the same version).
3. Insert the USB drive into the USB port on the wired controller.
4. Enter the menu, rotate the "right knob" to "Wired Controller Settings".

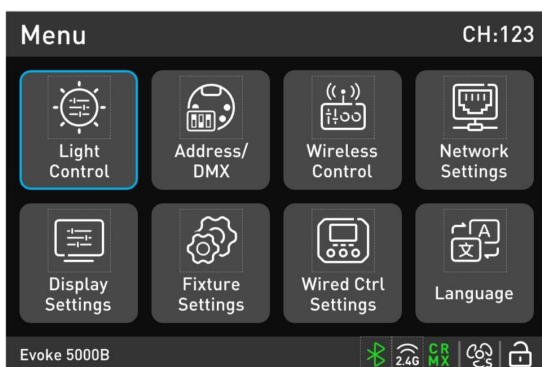

5. Enter the "Wired Controller Settings", rotate the "right knob" to "Wired Controller Firmware Update".

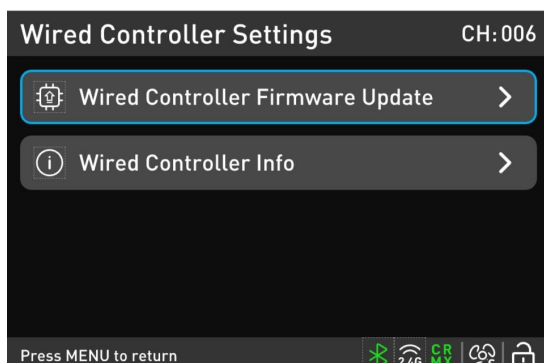

6. Press the "right knob" to enter the interface for searching the firmware file.



7. After the firmware file have been found, rotate the "right knob" to select "Update" to update the firmware.



8. The wired controller will restart automatically and work normally after the update is completed.



● Precautions:

1. Please do not rename the firmware file.
2. Ensure the USB drive is formatted to FAT, FAT32 or exFAT.
3. If it prompts "The versions of the firmware files don't match, please check the files and try again", please check whether the versions of the two firmware files are matched.
4. If it prompts "Missing parts of firmware files, please check the files and try again", please check whether there are two firmware files in the USB drive.
5. If it prompts "No firmware found", please check whether the firmware files are correct, whether the firmware files are stored in the root directory of the USB drive, or whether the USB drive format is FAT, FAT32 or exFAT.
6. If all the above steps are done and the firmware files still cannot be found, try to re-format the USB drive and update again.
7. If the fixture still cannot identify the USB drive, please replace the USB drive.